



---

**SOFTWARE  
INSTALLATION  
MANUAL**

# /01 GETTING STARTED

---



## Plug into your computer


- 1 The dongle
- 2 The USB key

**The first time, it will take a few minutes for the computer to recognize the hardware**

# /02 INSTALL YOUR OCTOPUS SOFTWARE

## What to do ?

- Go to your **USB key** and open the folder **Octopus Software > English**
- Double click on the file named "**Octopus\_eInstVXX.msi**"
- If you don't have the USB key, click [here](#) to download the software directly

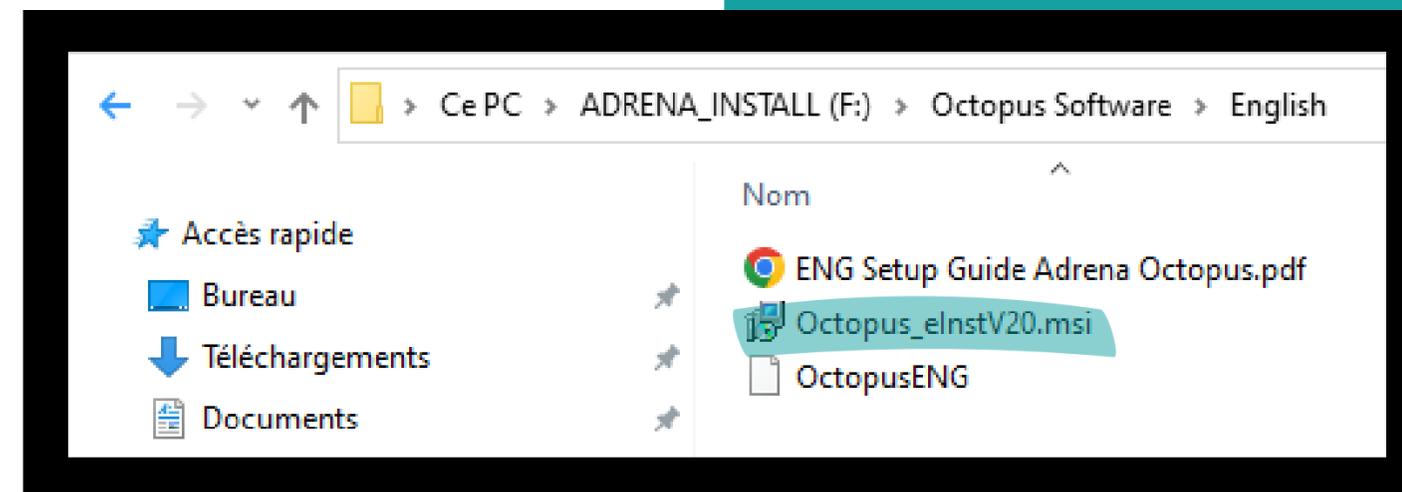


# /02 INSTALL YOUR OCTOPUS SOFTWARE

**Follow the procedure,  
always using the  
default values**

- > Next
- > Next
- > Finish


**Octopus software installation is  
now finished !**

# /03 LAUNCH OCTOPUS SOFTWARE

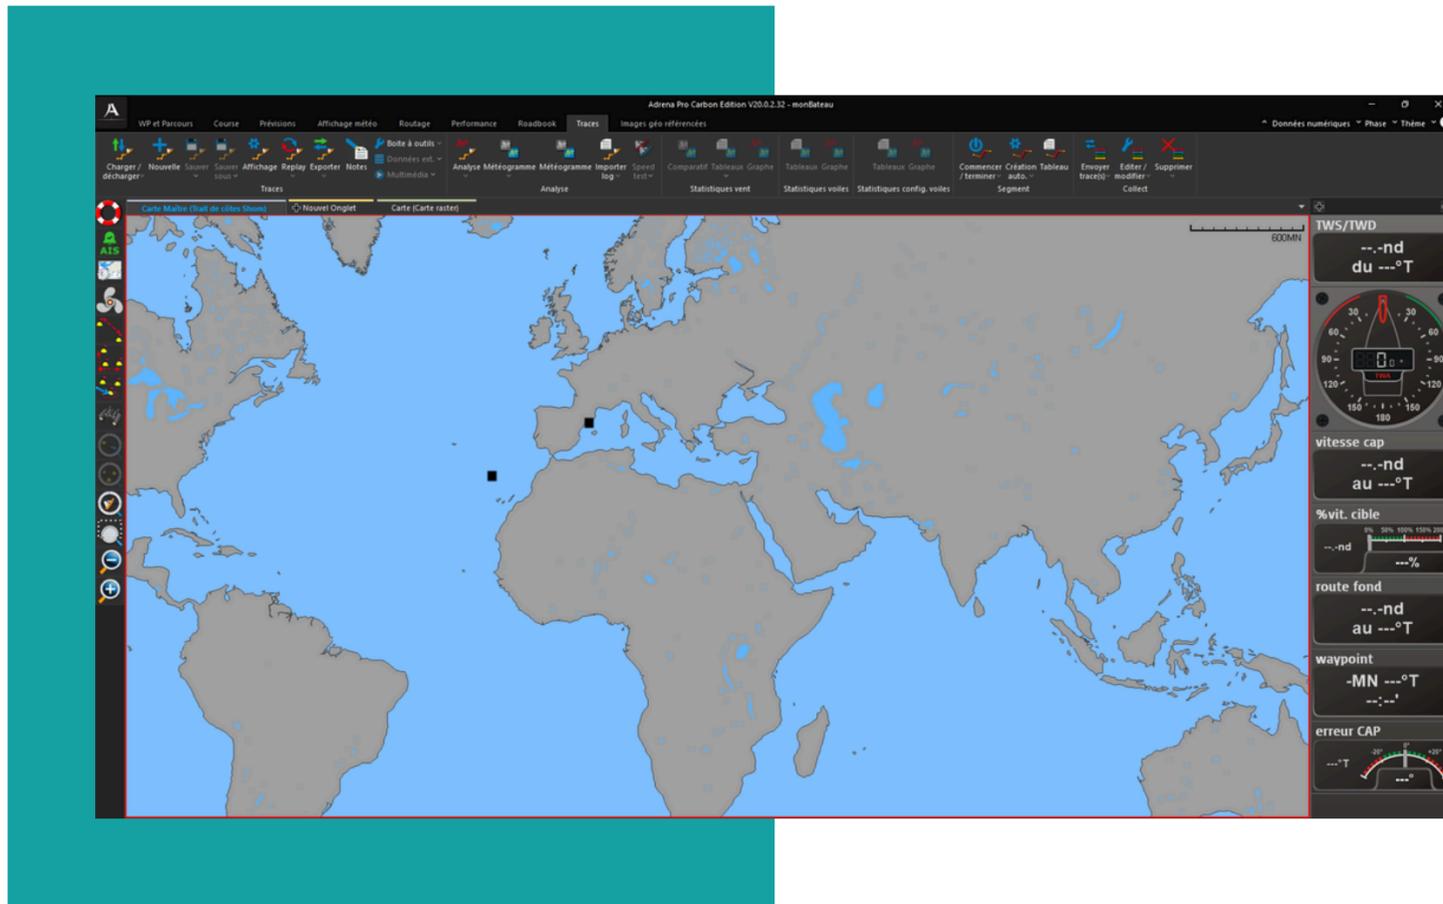

## What to do ?

- Double-click on the icon created on your desktop

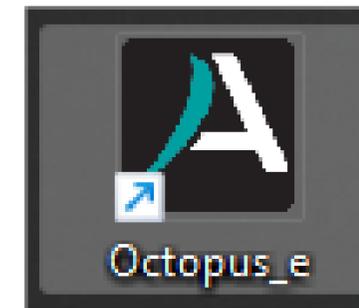

**Your software is installed !**

# /04 INSTALL YOUR CHARTS

## What to do ?



- Please refer to the installation instructions for the **C-MAP** and/or **SnMap** charts on the **USB key**

# /05 CONFIGUREZ DES LIAISONS

You will be able to receive navigation data from your control unit, GPS data and AIS information

- The **dongle** must be connected to the computer
- Open **Adrena** software
- Follow this path :

**1** General menu > **2** Settings > **3** General settings > **4** Connections

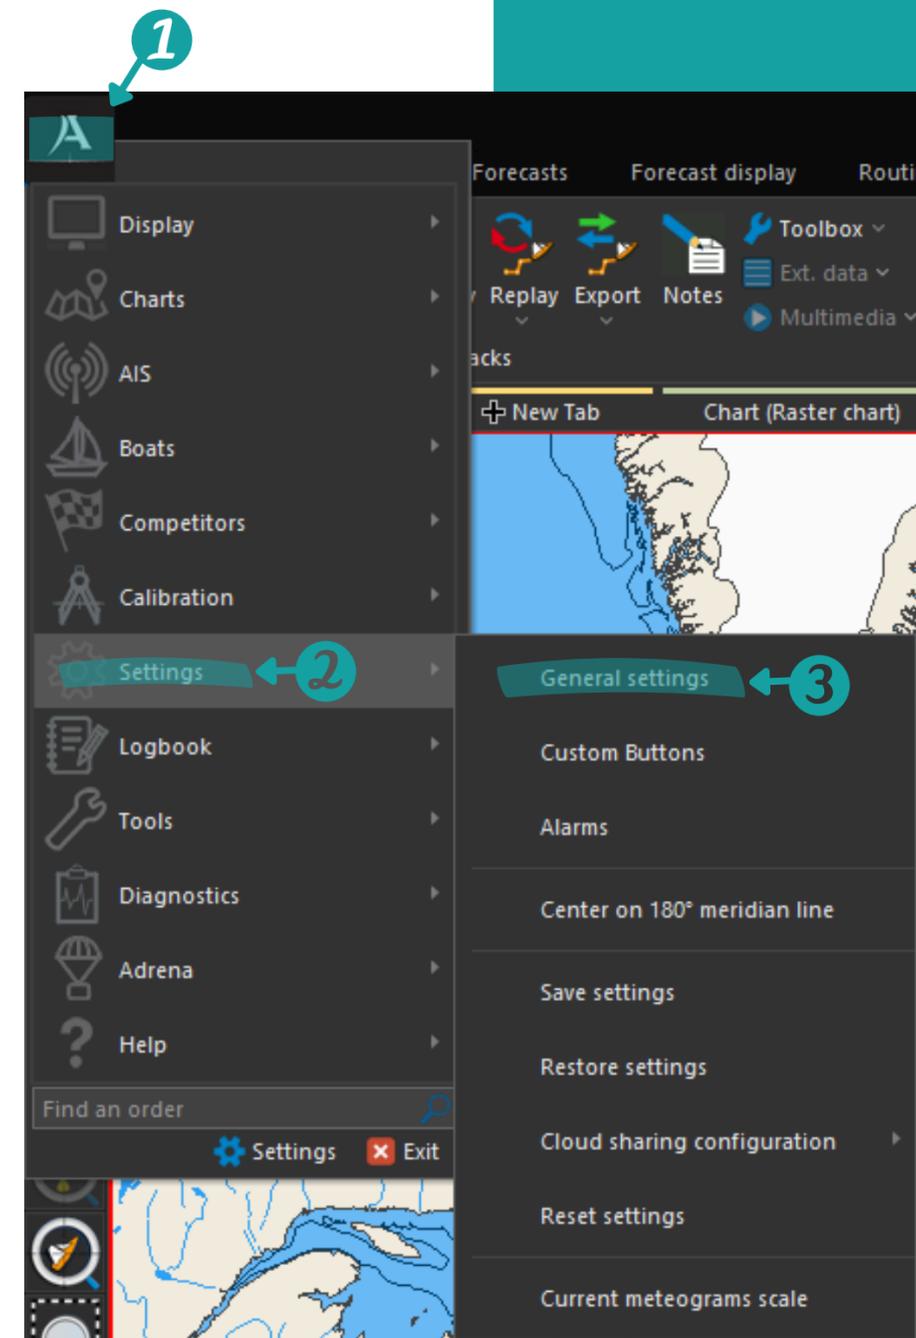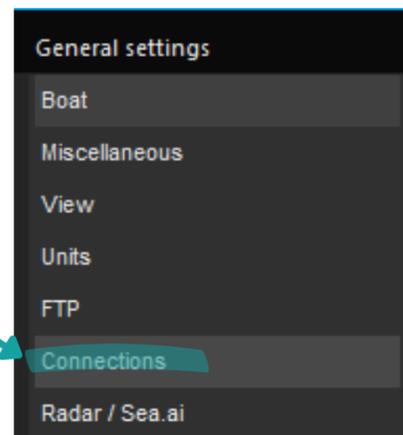


# /05 CONFIGURE CONNECTIONS

## Further information

- For a complete description of the different **connection parameters**, press the F1 shortcut key or follow the path below :

**1** General menu > **2** Help > **3** Reference manual

**Don't forget to validate the General Settings window to take in to account of the changes you have made**

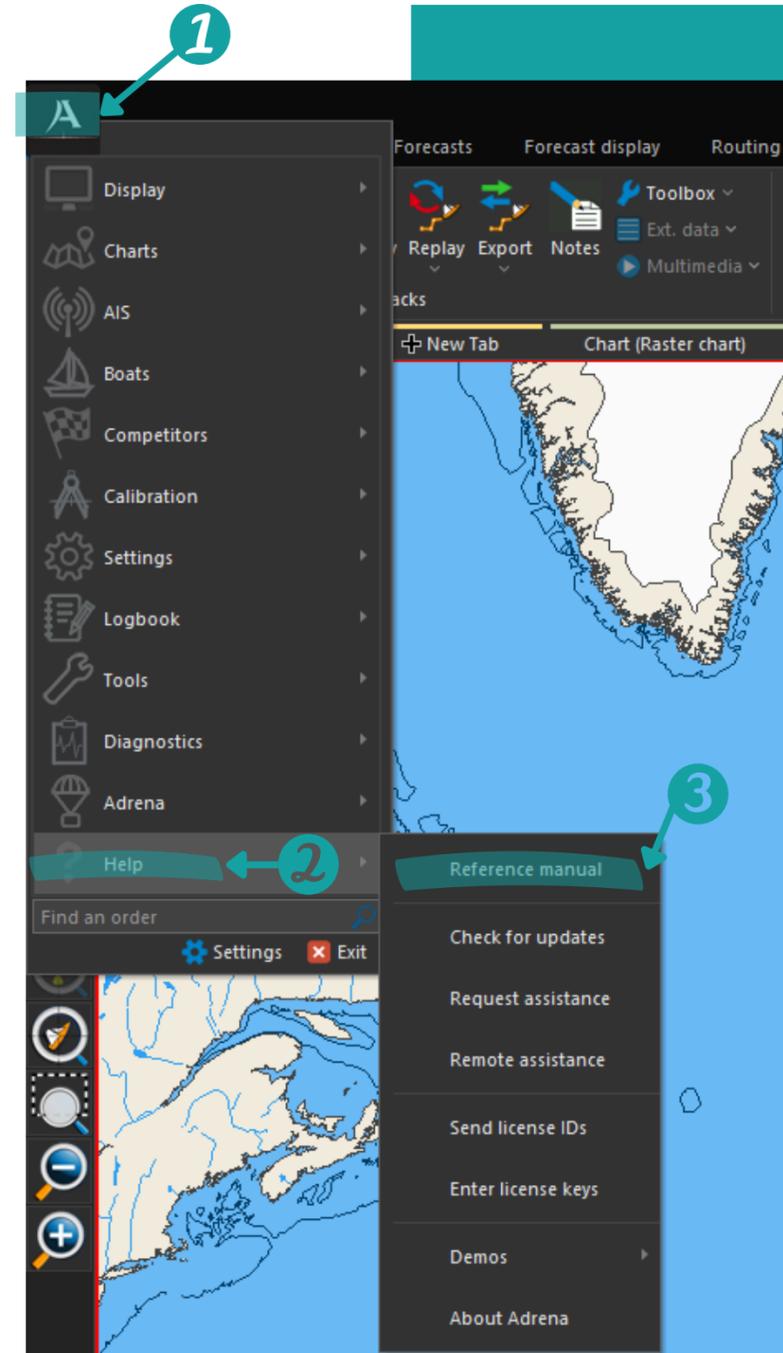

# /06 MINIMUM RECOMMENDED CONFIGURATION

- A PC running **Windows 7** or higher
- Minimum screen size **1980X1024**
- **NMEA 0183** connection via **serial port** or **network**
- **USB port** dedicated for the dongle
- Graphic memory: min. **256 MB**
- Minimum **1.5 GHz** multi-core processor
- RAM: **4 GB** minimum, **8 GB** recommended
- Available disk space: **2 to 4 GB**

**A multi-core processor will reduce routing calculation time**





You have installed  
your software

If you encounter any difficulties,  
please contact us at the following  
address: [support@adrena.fr](mailto:support@adrena.fr)